


## Connector Joining Wire Harness and Wire Harness

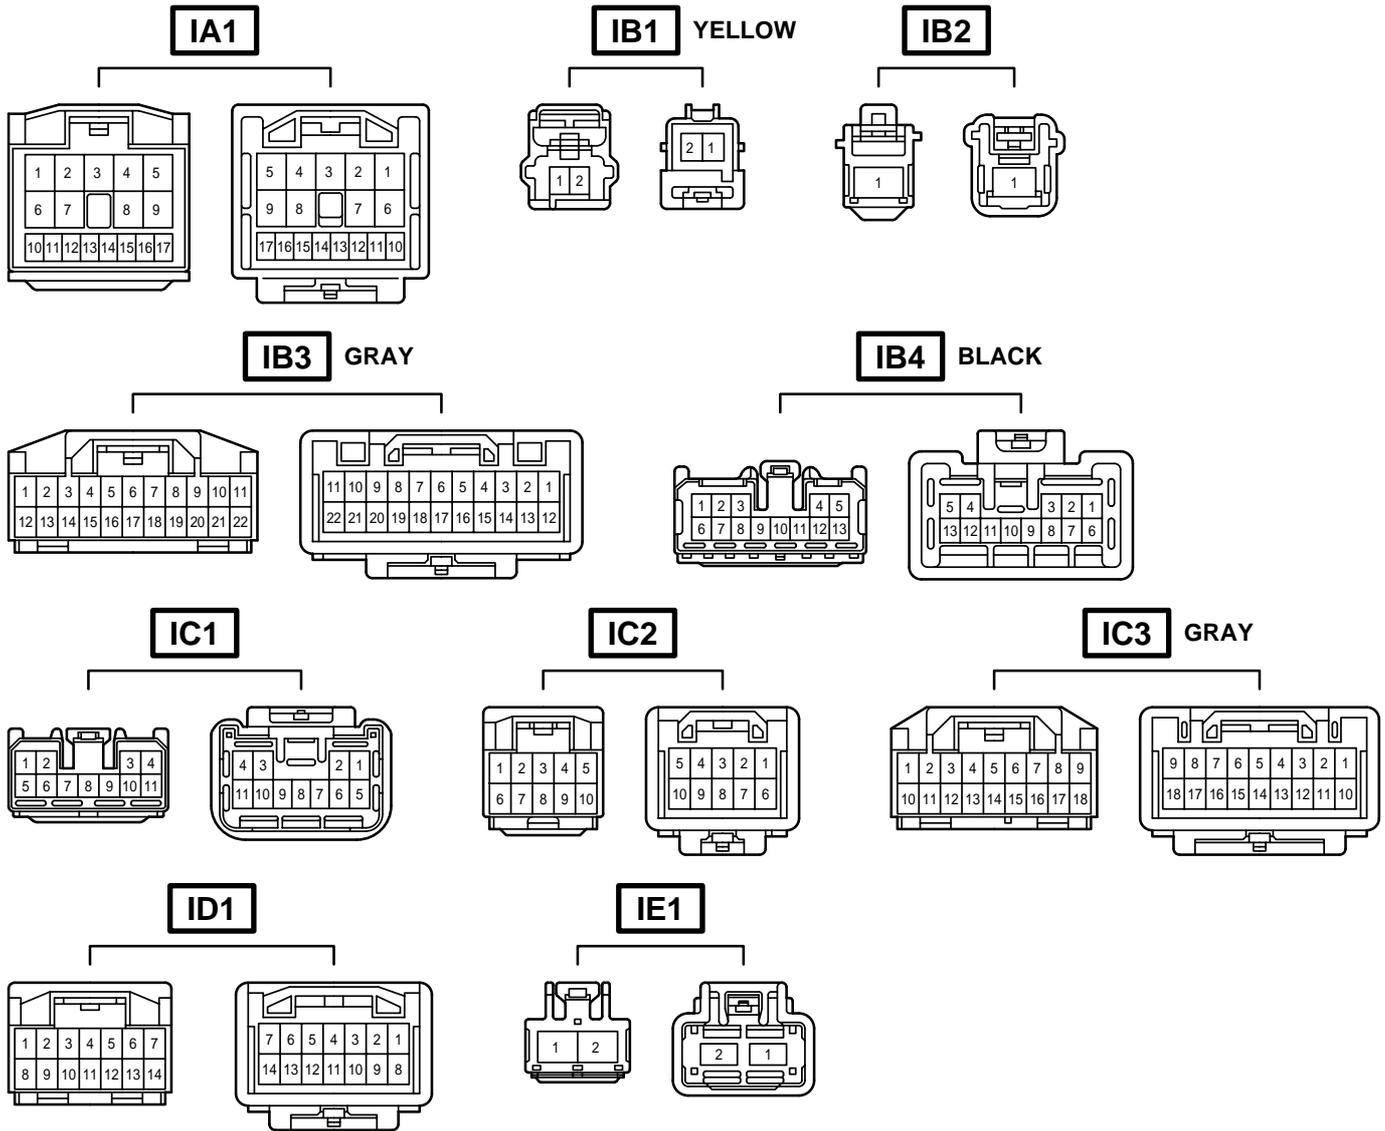

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IB2	
IB3	
IB4	
IC1	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC2	
IC3	
ID1	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel LH)
IE1	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)