


# Connector Joining Wire Harness and Wire Harness

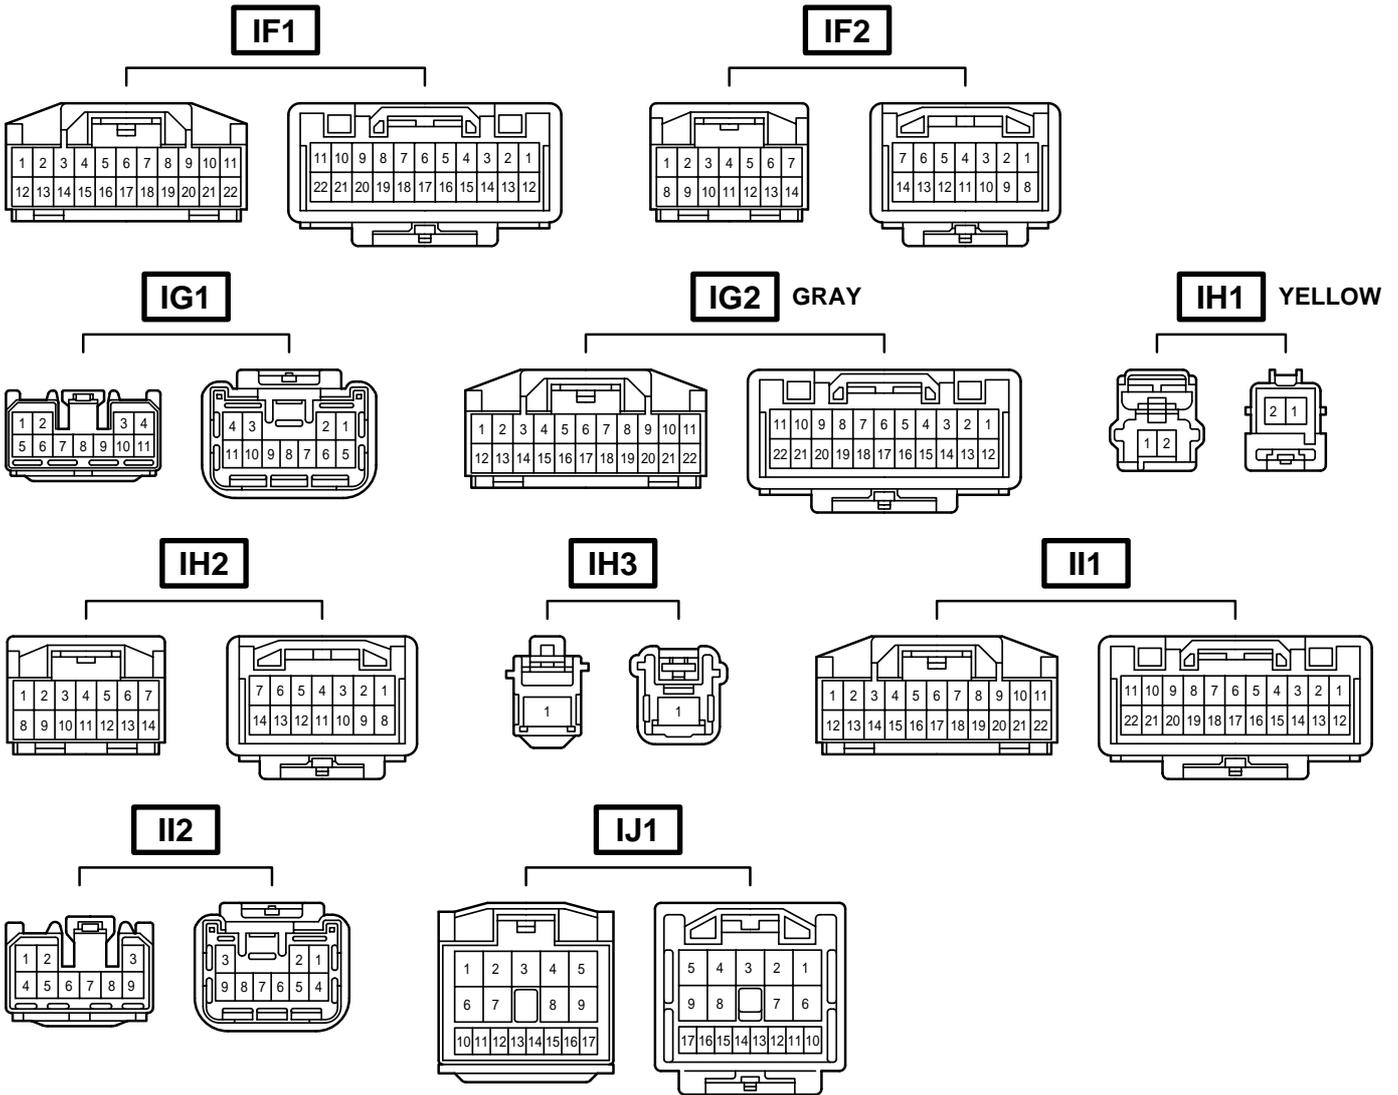

Code	Joining Wire Harness and Wire Harness (Connector Location)
IF1	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
IF2	
IG1	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IG2	
IH1	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IH2	
IH3	
II1	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
II2	
IJ1	Front Door RH Wire and Floor Wire (Right Kick Panel)