



Connector Joining Wire Harness and Wire Harness

BH1

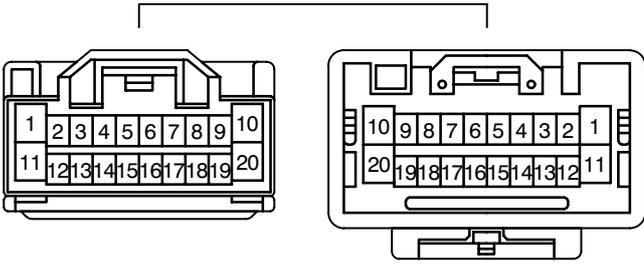

BI1

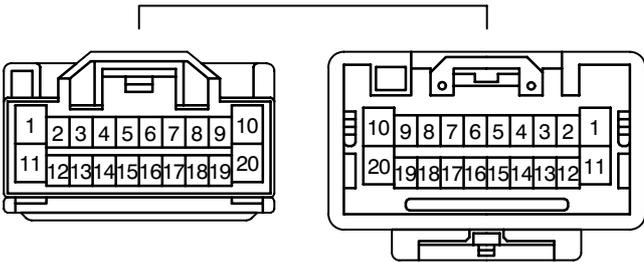

Code	Joining Wire Harness and Wire Harness (Connector Location)
BH1	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)