


## Connector Joining Wire Harness and Wire Harness

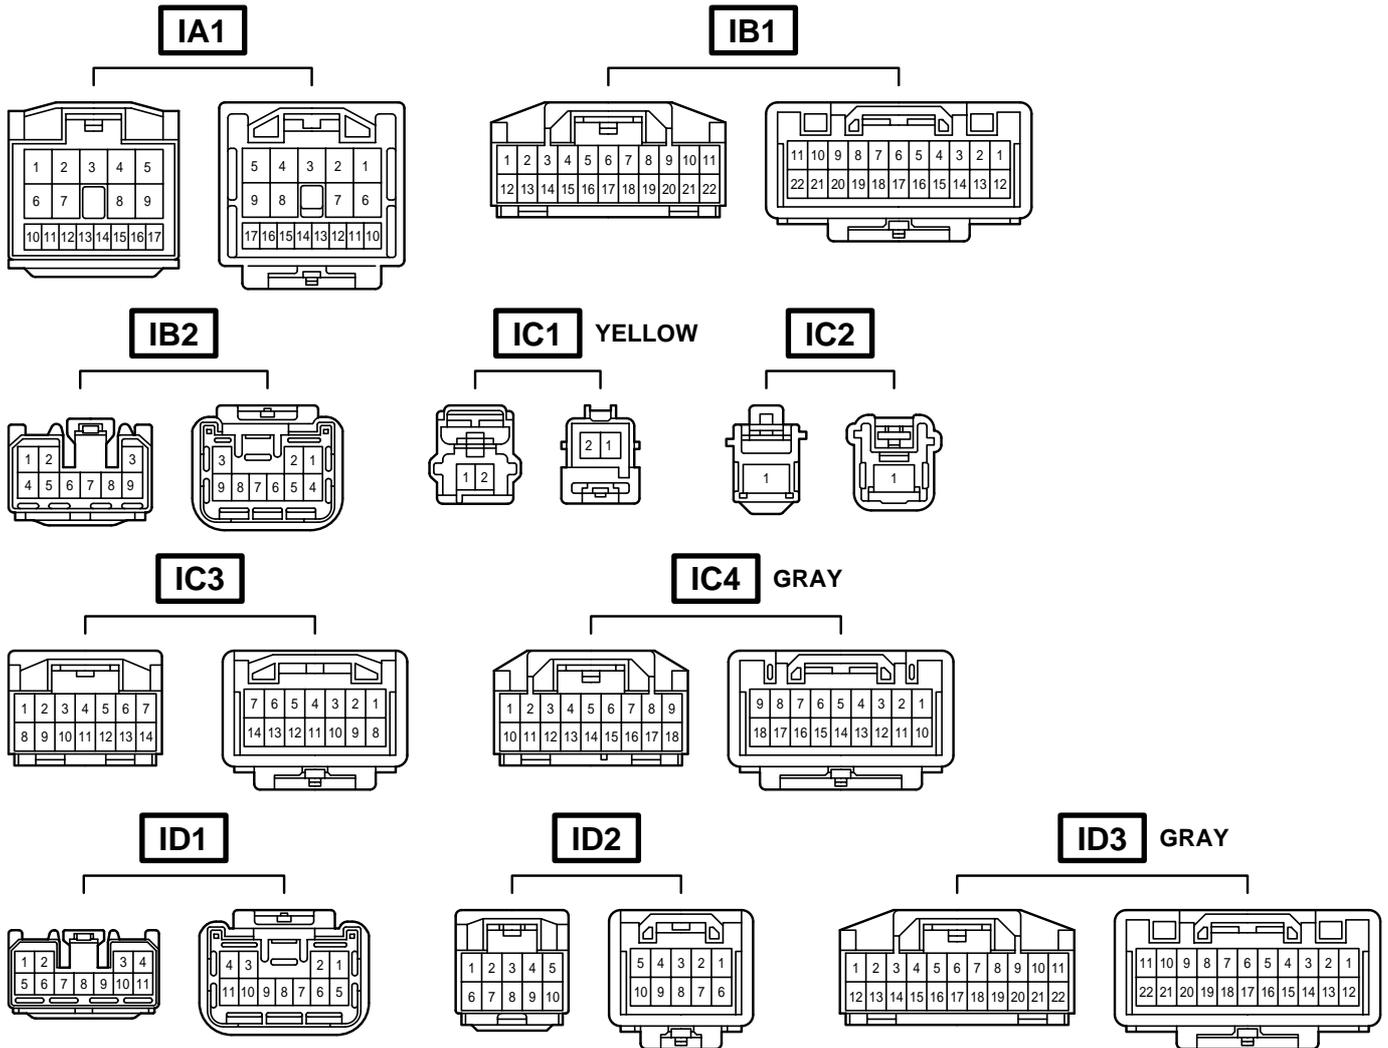

| Code | Joining Wire Harness and Wire Harness (Connector Location)           |
|------|--|
| IA1  | Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)             |
| IB1  | Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)             |
| IB2  |  |
| IC1  |  |
| IC2  | Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH) |
| IC3  |  |
| IC4  |  |
| ID1  |  |
| ID2  | Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)       |
| ID3  |  |