


## Connector Joining Wire Harness and Wire Harness

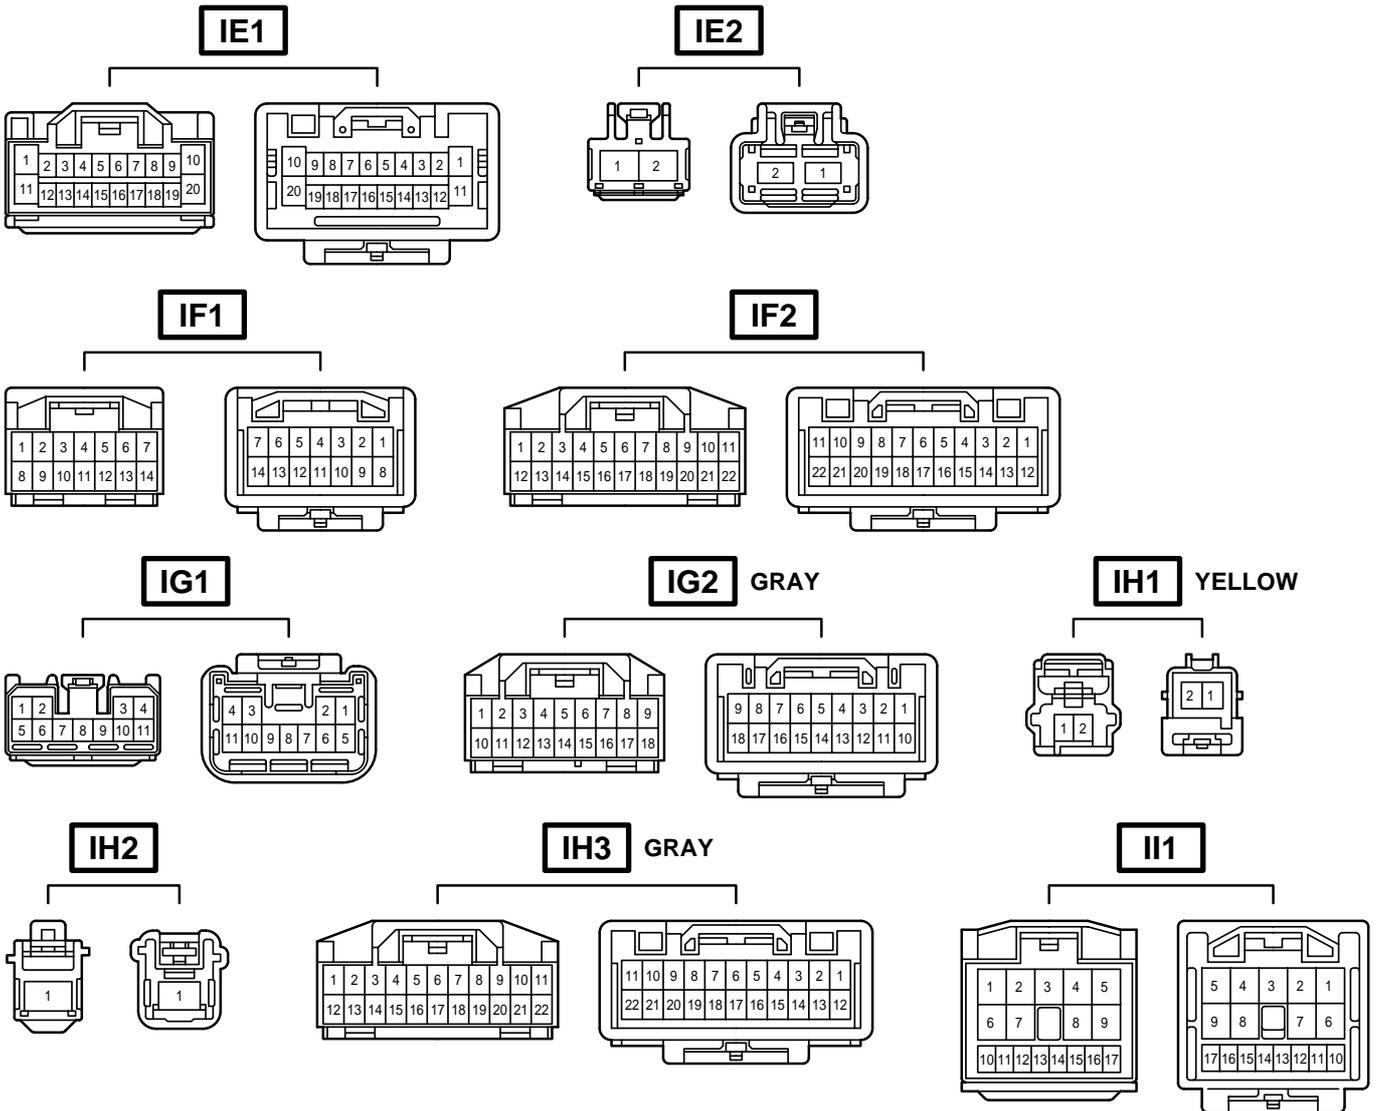

Code	Joining Wire Harness and Wire Harness (Connector Location)
IE1	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
IE2	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
IF1	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
IF2	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
IG1	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IG2	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IH1	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IH2	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IH3	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	Front Door RH Wire and Floor Wire (Right Kick Panel)