


Connector Joining Wire Harness and Wire Harness

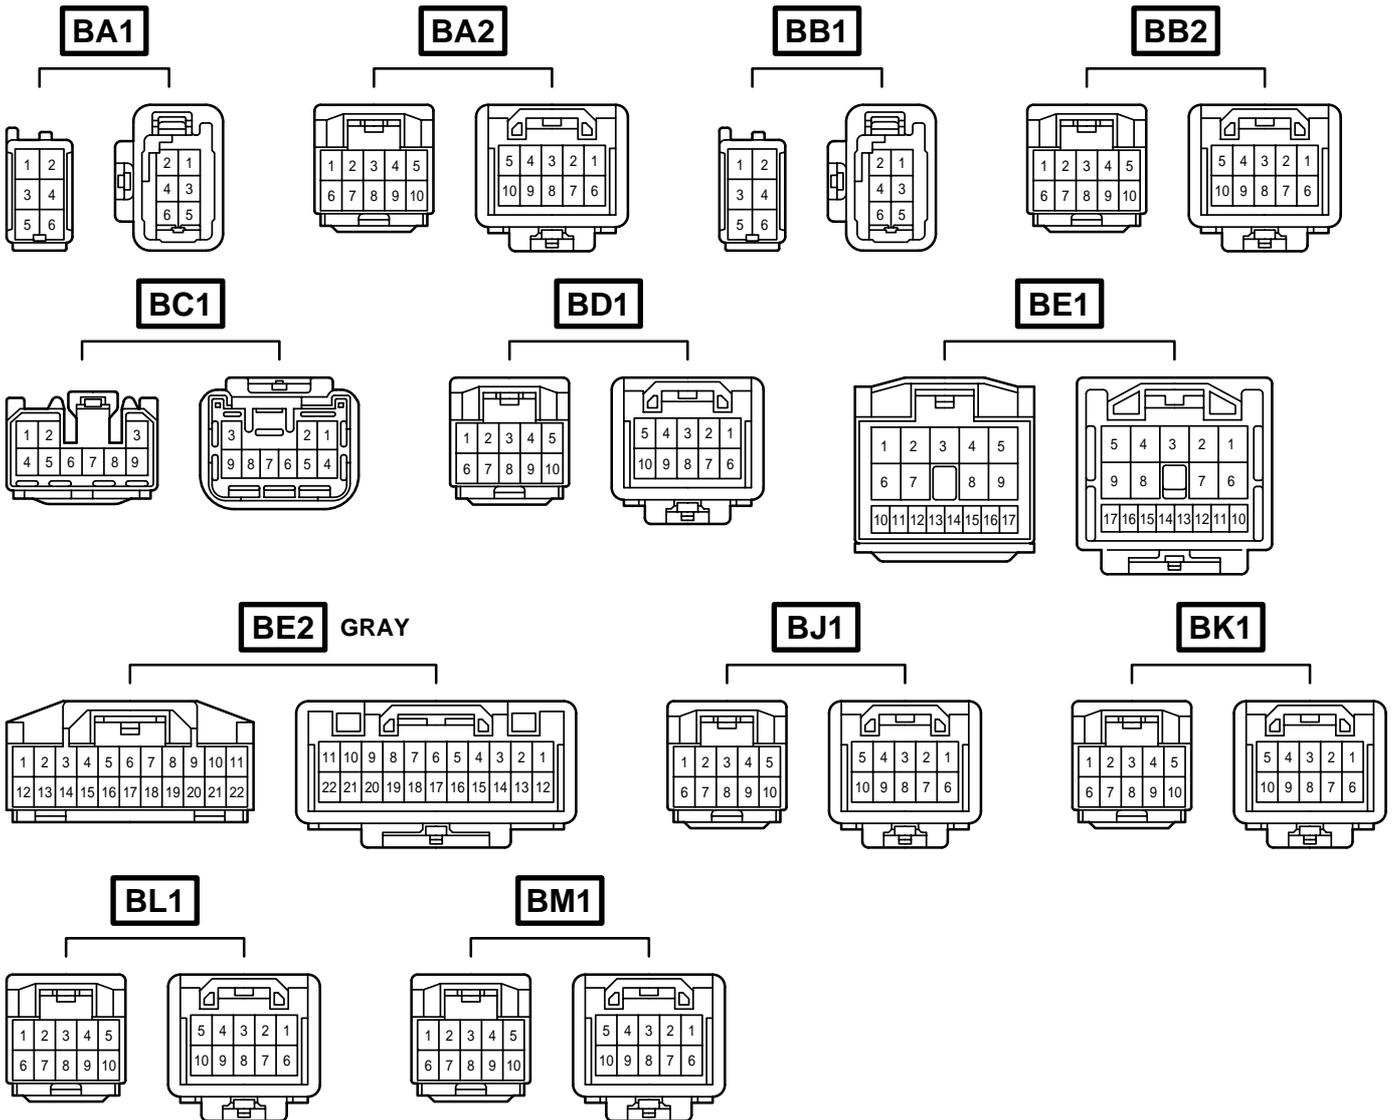

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2	
BB1	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2	
BC1	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BD1	Floor No.3 Wire and Floor No.2 Wire (Lower Back Panel LH)
BE1	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BE2	
BJ1	Front Door LH Wire and Electrical Key Front LH Sub Wire (Near the Front Door Outside Handle LH)
BK1	Front Door RH Wire and Electrical Key Front RH Sub Wire (Near the Front Door Outside Handle RH)
BL1	Rear Door No.2 Wire and Electrical Key Rear LH Sub Wire (Near the Rear Door Outside Handle LH)
BM1	Rear Door No.1 Wire and Electrical Key Rear RH Sub Wire (Near the Rear Door Outside Handle RH)