


Connector Joining Wire Harness and Wire Harness

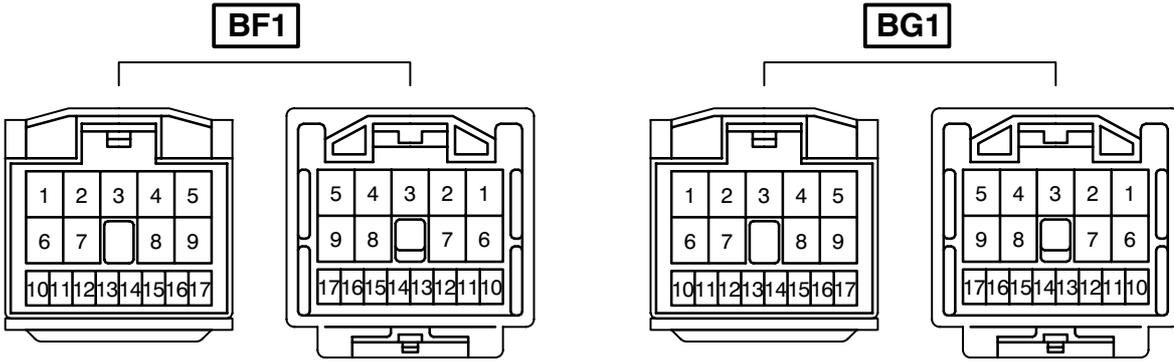

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|---|
| BF1 | Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat) |
| BG1 | Floor Wire and Front Seat RH Wire (Under the Driver's Seat) |