

SERVICE HINTS**O6 OVERHEAD J/B**

26, 28-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 1, 16-GROUND : Always continuity

I19 INNER MIRROR

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 4-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D25	120 (LHD)	I19	121 (LHD)	O6	122 (LHD)
F17	120 (LHD)	J15	117 (LHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
II1	144 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
II	142 (LHD)	Right Side of Shift Lever