

SERVICE HINTS**O6 OVERHEAD J/B**

26, 28-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 1, 16-GROUND : Always continuity

I19 INNER MIRROR

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 4-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D25	134 (RHD)	I19	135 (RHD)	O6	136 (RHD)
F17	134 (RHD)	J15	131 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	154 (RHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	154 (RHD)	Left Side of Shift Lever