

SERVICE HINTS**LUGGAGE ROOM J/B ECU**

12-GROUND : Always approx. 12 volts

14-GROUND : Always continuity

N1 BACK-UP LIGHT SW [NEUTRAL START SW]3-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position**○ : PARTS LOCATION**

Code		See Page	Code		See Page	Code		See Page
A14		130 (RHD)	J1	A	128 (RHD)	L11	A	135 (RHD)
C6		130 (RHD)	J2	B	128 (RHD)	L13	C	135 (RHD)
E3	A	126 (RHD)	J24		135 (RHD)	N1		129 (RHD)
E7	E	126 (RHD)	J25	A	135 (RHD)	R11		136 (RHD)
G1		131 (RHD)	J26	B	135 (RHD)	R13		136 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
LL	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	152 (RHD)	Engine Wire and Engine Room Main Wire (Inside of ECU Box)
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IE2	156 (RHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BM	158 (RHD)	Quarter Panel LH