

SYSTEM OUTLINE

In the cruise control system, the engine and ECT ECU controls the throttle control motor to allow the vehicle to travel at a constant speed set by the cruise control SW.

SERVICE HINTS

E4 (B), E5 (C), E6 (D), E7 (E) ENGINE AND ECT ECU

(B) 4, (B) 7-GROUND : Always approx. 12 volts

(B) 17-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

(B) 2, (C) 1, (C) 2, (C) 3, (D) 4, (E) 7-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page		
A14	130 (RHD)	E6	D	126 (RHD)	N1	129 (RHD)	
A22	130 (RHD)	E7	E	126 (RHD)	P3	A	132 (RHD)
A27	130 (RHD)	G1		131 (RHD)	S3		129 (RHD)
C6	130 (RHD)	J1	A	128 (RHD)	S8		133 (RHD)
C12	130 (RHD)	J2	B	128 (RHD)	S11	A	133 (RHD)
C13	130 (RHD)	J3	A	128 (RHD)	S12	B	133 (RHD)
D1	131 (RHD)	J4	B	128 (RHD)	S13	C	133 (RHD)
D2	131 (RHD)	J5		128 (RHD)	S14	D	133 (RHD)
E1	126 (RHD)	J7		128 (RHD)	S21		133 (RHD)
E3	A	J11		131 (RHD)	T2		129 (RHD)
E4	B	J13		131 (RHD)	T3		129 (RHD)
E5	C	J14		131 (RHD)			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	99 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DH		
PC	106 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PH		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	152 (RHD)	Engine Wire and Engine Room Main Wire (Inside of ECU Box)
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IC4		
IH3	156 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)

CRUISE CONTROL (RHD)



: GROUND POINTS

Code	See Page	Ground Points Location
ED	152 (RHD)	Under the Fusible Link Block
EE	152 (RHD)	RH Side of Cylinder Head
EF	152 (RHD)	LH Side of Cylinder Head
IG	154 (RHD)	Cowl Side Panel LH
IH II	154 (RHD)	Left Side of Shift Lever



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	152 (RHD)	Engine Room Main Wire	E9	152 (RHD)	Engine Room Main Wire

