

CLIMATE CONTROL SEAT (LHD)

SYSTEM OUTLINE

The system sends the cool or warm air from the seat surface to ease the warmth, coldness or stuffy feelings on the seat, which the passengers may feel.

By operating the climate control seat SW, the air is sent to seat cushion or seat back from the fan installed under the seat. The air is heated or cooled by the Peltier element installed on the back on the pad on the seat cushion or seat back and is sent to the seat surface.

And by operating the climate control seat SW, the quantity of the air can be adjusted among three levels for cooled heated, three levels for heated air and the ventilation mode. When the maximum cooled air is sent, the quantity of the air falls one level after the 15 minutes from the operation.

SERVICE HINTS

C20 CLIMATE CONTROL SEAT ECU (DRIVER'S SEAT)

7-GROUND : Approx. 12 volts with ignition SW at ON or ST position

8-GROUND : Always continuity

C21 CLIMATE CONTROL SEAT ECU (FRONT PASSENGER'S SEAT)

7-GROUND : Approx. 12 volts with ignition SW at ON or ST position

8-GROUND : Always continuity

T7 CLIMATE CONTROL SEAT LH, CLIMATE CONTROL SEAT SW RH

14-GROUND : Approx. 12 volts with ignition SW at ON or ST position

6-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
C20	124 (LHD)	J15	A	117 (LHD)	S38	124 (LHD)
C21	124 (LHD)	J16	B	117 (LHD)	S39	124 (LHD)
D28	124 (LHD)	J22		121 (LHD)	T7	119 (LHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DJ	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PJ	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IG1	144 (LHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IG2		
BF1	148 (LHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BG2	148 (LHD)	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IK	142 (LHD)	Cowl Side Panel RH
IR	142 (LHD)	Under the Front Passenger's Seat
BL	146 (LHD)	Rear Floor Partition Panel LH

