

CLIMATE CONTROL SEAT (RHD)

SYSTEM OUTLINE

The system sends the cool or warm air from the seat surface to ease the warmth, coldness or stuffy feelings on the seat, which the passengers may feel.

By operating the climate control seat SW, the air is sent to seat cushion or seat back from the fan installed under the seat. The air is heated or cooled by the Peltier element installed on the back on the pad on the seat cushion or seat back and is sent to the seat surface.

And by operating the climate control seat SW, the quantity of the air can be adjusted among three levels for cooled heated, three levels for heated air and the ventilation mode. When the maximum cooled air is sent, the quantity of the air falls one level after the 15 minutes from the operation.

SERVICE HINTS

C20 CLIMATE CONTROL SEAT ECU (DRIVER'S SEAT)

7-GROUND : Approx. 12 volts with ignition SW at ON or ST position

8-GROUND : Always continuity

C21 CLIMATE CONTROL SEAT ECU (FRONT PASSENGER'S SEAT)

7-GROUND : Approx. 12 volts with ignition SW at ON or ST position

8-GROUND : Always continuity

T7 CLIMATE CONTROL SEAT SW LH, CLIMATE CONTROL SEAT SW RH

14-GROUND : Approx. 12 volts with ignition SW at ON or ST position

6-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
C20	138 (RHD)	J15	A	131 (RHD)	S38	138 (RHD)
C21	138 (RHD)	J16	B	131 (RHD)	S39	138 (RHD)
D28	138 (RHD)	J22		135 (RHD)	T7	133 (RHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DJ	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PJ	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
BF1	160 (RHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BG1	160 (RHD)	Floor Wire and Front Seat RH Wire (Under the Driver's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IR	154 (RHD)	Under the Driver's Seat
BL	158 (RHD)	Rear Floor Partition Panel LH

