

SERVICE HINTS**C10 CLOCK**8-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position4-GROUND : Always approx. **12** volts

5-GROUND : Always continuity

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page		
A15	116 (LHD)	J11	A	117 (LHD)	J15	A	117 (LHD)
C6	116 (LHD)	J12	B	117 (LHD)	J16	B	117 (LHD)
C10	116 (LHD)	J13	A	117 (LHD)			
C12	116 (LHD)	J14	B	117 (LHD)			

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DF	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
II	142 (LHD)	Right Side of Shift Lever