

SERVICE HINTS**C10 CLOCK**8-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position4-GROUND : Always approx. **12** volts

5-GROUND : Always continuity

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
A15	130 (RHD)	J11	A 131 (RHD)	J15	A 131 (RHD)
C6	130 (RHD)	J12	B 131 (RHD)	J16	B 131 (RHD)
C10	130 (RHD)	J13	A 131 (RHD)		
C12	130 (RHD)	J14	B 131 (RHD)		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DF	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IH	154 (RHD)	Left Side of Shift Lever