

SERVICE HINTS

C7 CIGARETTE LIGHTER (FRONT)

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
 4-GROUND : Always continuity

C8 CIGARETTE LIGHTER (REAR)

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
 4-GROUND : Always continuity

P6 POWER OUTLET

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
 2-GROUND : Always continuity

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C7	116 (LHD)	J30	121 (LHD)		
C8	116 (LHD)	P6	118 (LHD)		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DG	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DJ	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PG	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BE1	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

 : GROUND POINTS

Code	See Page	Ground Points Location
IK	142 (LHD)	Cowl Side Panel RH
BO	146 (LHD)	Quarter Panel RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	144 (LHD)	Instrument Panel Wire			