

SERVICE HINTS

C7 CIGARETTE LIGHTER (FRONT)

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position

4-GROUND : Always continuity

C8 CIGARETTE LIGHTER (REAR)

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position

4-GROUND : Always continuity

P6 POWER OUTLET

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position

2-GROUND : Always continuity

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C7	130 (RHD)	J27	135 (RHD)		
C8	130 (RHD)	P6	132 (RHD)		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DG	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DJ	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PG	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	156 (RHD)	Instrument Panel Wire			