

COMBINATION METER (LHD)

SYSTEM OUTLINE

The tachometer, warning, diagnosis codes are displayed in the multi-display. The warning light indicator is linked with the multi-display, and comes on or goes off according to the condition. Respective data are input into the combination meter through communication control of the J/B ECU, door ECU etc.

SERVICE HINTS

C12 COMBINATION METER

- 1-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 12, 13-GROUND : Always approx. 12 volts
- 11, 22-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page			
A7	112 (LHD)	E3	A	112 (LHD)	L12	B	121 (LHD)	
A14	C	116 (LHD)	E6	D	112 (LHD)	L13	C	121 (LHD)
A24	116 (LHD)	E7	E	112 (LHD)	M2		118 (LHD)	
A27	116 (LHD)	E9		112 (LHD)	O2		115 (LHD)	
A33	120 (LHD)	F19		120 (LHD)	P2		118 (LHD)	
B1	112 (LHD)	F20		120 (LHD)	P3	A	118 (LHD)	
C6	116 (LHD)	G1		117 (LHD)	P7		118 (LHD)	
C12	116 (LHD)	J4		114 (LHD)	S11	A	119 (LHD)	
C13	116 (LHD)	J7		114 (LHD)	S12	B	119 (LHD)	
C14	116 (LHD)	J11		117 (LHD)	S13	C	119 (LHD)	
D1	117 (LHD)	J13		117 (LHD)	S16		119 (LHD)	
D2	A	117 (LHD)	J17	A	117 (LHD)	S33	123 (LHD)	
D3	B	117 (LHD)	J18	B	117 (LHD)	T10	119 (LHD)	
D4	C	117 (LHD)	J30		121 (LHD)			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DH		
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PH		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB3	142 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IF1	144 (LHD)	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
IH2	144 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
BE2	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EC	140 (LHD)	Radiator Side Support LH
EF	140 (LHD)	LH Side of Cylinder Head
IH	142 (LHD)	Right Side of Shift Lever
IK	142 (LHD)	Cowl Side Panel RH
BO	146 (LHD)	Quarter Panel RH