

# COMBINATION METER (RHD)

## SYSTEM OUTLINE

The tachometer, warning, diagnosis codes are displayed in the multi-display. The warning light indicator is linked with the multi-display, and comes on or goes off according to the condition. Respective data are input into the combination meter through communication control of the J/B ECU, door ECU etc.

## SERVICE HINTS

### C12 COMBINATION METER

- 1-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 12, 13-GROUND : Always approx. 12 volts
- 11, 22-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page		
A7	126 (RHD)	D4	C	131 (RHD)	J27	135 (RHD)	
A14	130 (RHD)	E3	A	126 (RHD)	L12	B	135 (RHD)
A24	130 (RHD)	E6	D	126 (RHD)	L13	C	135 (RHD)
A27	130 (RHD)	E7	E	126 (RHD)	M2		132 (RHD)
A33	134 (RHD)	E9		126 (RHD)	O2		129 (RHD)
B1	126 (RHD)	F19		134 (RHD)	P2		132 (RHD)
C6	130 (RHD)	F20		134 (RHD)	P3	A	132 (RHD)
C12	130 (RHD)	G1		131 (RHD)	P7		132 (RHD)
C13	130 (RHD)	J4		128 (RHD)	S11	A	133 (RHD)
C14	130 (RHD)	J11		131 (RHD)	S12	B	133 (RHD)
D1	131 (RHD)	J13		131 (RHD)	S13	C	133 (RHD)
D2	A	J17	A	131 (RHD)	S33		137 (RHD)
D3	B	J18	B	131 (RHD)	T10		133 (RHD)

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	99 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
DH		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PH		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IC4		
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		
IF1	156 (RHD)	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
IH3	156 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BE2		

**: GROUND POINTS**

Code	See Page	Ground Points Location
EF	152 (RHD)	LH Side of Cylinder Head
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever
IK	154 (RHD)	Right Side of Instrument Panel
BN	158 (RHD)	Rear Floor Partition Panel RH