

# CELLULAR MOBILE TELEPHONE (LHD)

## SERVICE HINTS

### T15 (C) TELEPHONE TRANSCEIVER AND SPEAKER RELAY

- (C)13-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (C) 3-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
- (C) 2-GROUND : Always approx. 12 volts
- (C) 12, (C) 14-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page		
A16	116 (LHD)	J13	A	117 (LHD)	S34	C	123 (LHD)
C5	116 (LHD)	J14	B	117 (LHD)	T13	A	123 (LHD)
C13	116 (LHD)	J30		121 (LHD)	T14	B	123 (LHD)
J3	A	114 (LHD)	O6	122 (LHD)	T15	C	123 (LHD)
J4	B	114 (LHD)	R18	122 (LHD)	T17		123 (LHD)
J9	117 (LHD)	S33	B	123 (LHD)			

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	88 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
LE	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LF		
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	144 (LHD)	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
IG2	144 (LHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	144 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
BA1	146 (LHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BC1	146 (LHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BE1	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
EF	140 (LHD)	LH Side of Cylinder Head
IK	142 (LHD)	Cowl Side Panel RH
BO	146 (LHD)	Quarter Panel RH

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	146 (LHD)	Roof Wire			

