

CELLULAR MOBILE TELEPHONE (RHD)

SERVICE HINTS

T15 (C) TELEPHONE TRANSCEIVER AND SPEAKER RELAY

- (C)13-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (C) 3-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
- (C) 2-GROUND : Always approx. 12 volts
- (C) 12, (C)14-GROUND: Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A16	130 (RHD)	J28	A	135 (RHD)	S34 C 137 (RHD)
C5	130 (RHD)	J29	B	135 (RHD)	T13 A 137 (RHD)
C13	130 (RHD)	J30		135 (RHD)	T14 B 137 (RHD)
J3	A 128 (RHD)	O6		136 (RHD)	T15 C 137 (RHD)
J4	B 128 (RHD)	R19		136 (RHD)	T18 137 (RHD)
J9	131 (RHD)	S33	B	137 (RHD)	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	99 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
LE	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	154 (RHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IF1	156 (RHD)	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
IF2		
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
BB1	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EF	152 (RHD)	LH Side of Cylinder Head
IH	154 (RHD)	Left Side of Shift Lever
BO	158 (RHD)	Quarter Panel RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	158 (RHD)	Roof Wire	B3	158 (RHD)	Roof Wire

