

CHARGING (LHD)

SERVICE HINTS

A12 (A), A13 (B) ALTERNATOR

(B) 3, (A) 1-GROUND : Always approx. 12 volts

(B) 2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A12	A	112 (LHD)	E7	E	112 (LHD)	J17	A	117 (LHD)
A13	B	112 (LHD)	J1	A	114 (LHD)	J18	B	117 (LHD)
A27		116 (LHD)	J2	B	114 (LHD)	P3	A	118 (LHD)
C12		116 (LHD)	J11		117 (LHD)	S13		119 (LHD)
E3	A	112 (LHD)	J13		117 (LHD)			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
4A	84 (LHD)	Engine Room Main Wire and Fusible Link Block (Engine Compartment Right)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DH		
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PH		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	140 (LHD)	Engine Wire and Engine Room Main Wire (Inside of ECU Box)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	142 (LHD)	Right Side of Shift Lever
IK	142 (LHD)	Cowl Side Panel RH

