

# CHARGING (RHD)

## SERVICE HINTS

### A12 (A), A13 (B) ALTERNATOR

(B) 3, (A) 1-GROUND : Always approx. 12 volts

(B) 2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

## ○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A12	A	126 (RHD)	E3	A	126 (RHD)	J11		131 (RHD)
A13	B	126 (RHD)	E7	E	126 (RHD)	J13		131 (RHD)
A27		130 (RHD)	J1	A	128 (RHD)	P3	A	132 (RHD)
C12		130 (RHD)	J2	B	128 (RHD)	S13		133 (RHD)

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
4A	85 (RHD)	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DH		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PH		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	152 (RHD)	Engine Wire and Engine Room Main Wire (Inside of ECU Box)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever

