

ENGINE IMMOBILISER SYSTEM (LHD w/o SMART KEY SYSTEM)

SERVICE HINTS

T9 TRANSPONDER KEY COMPUTER

- 1-GROUND : Always approx. 12 volts
- 2-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 14-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D12	120 (LHD)	F17	120 (LHD)	R16	122 (LHD)
D13	120 (LHD)	G1	117 (LHD)	T5	119 (LHD)
D14	120 (LHD)	J11	A	T8	119 (LHD)
D15	120 (LHD)	J12	B	T9	119 (LHD)
D25	120 (LHD)	R6	119 (LHD)	U7	119 (LHD)
E3	112 (LHD)	R15	122 (LHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB3	142 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA2	146 (LHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB2	146 (LHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC1	146 (LHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	142 (LHD)	Right Side of Shift Lever

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	144 (LHD)	Instrument Panel Wire			

