

ENGINE IMMOBILISER AND STEERING LOCK SYSTEM (RHD w/ SMART KEY SYSTEM)

SERVICE HINTS

S17 STEERING LOCK ECU

- 1, 10-GROUND : Always approx. 12 volts
- 2-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 9-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
D12	134 (RHD)	J11	A	131 (RHD)	R6	133 (RHD)
D13	134 (RHD)	J12	B	131 (RHD)	R15	136 (RHD)
D14	134 (RHD)	J24		135 (RHD)	R16	136 (RHD)
D15	134 (RHD)	J25	A	135 (RHD)	S8	133 (RHD)
D25	134 (RHD)	J26	B	135 (RHD)	S17	133 (RHD)
E3	126 (RHD)	L5		135 (RHD)	T5	133 (RHD)
F17	134 (RHD)	L11	A	135 (RHD)	T8	133 (RHD)
G1	131 (RHD)	L13	C	135 (RHD)	U7	133 (RHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IH3	156 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA2	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB2	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
II	154 (RHD)	Left Side of Shift Lever
BM	158 (RHD)	Quarter Panel LH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	156 (RHD)	Instrument Panel Wire			

