

FRONT FOG LIGHT (LHD)

SERVICE HINTS

FRONT CONTROLLER

3-GROUND : Always approx. 12 volts

C14 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

8-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	116 (LHD)	F4	113 (LHD)	J15	A 117 (LHD)
C14	116 (LHD)	G1	117 (LHD)	J16	B 117 (LHD)
D2	A 117 (LHD)	J11	117 (LHD)	J17	A 117 (LHD)
D4	C 117 (LHD)	J13	117 (LHD)	J18	B 117 (LHD)
F3	113 (LHD)	J14	117 (LHD)	P7	118 (LHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	140 (LHD)	Radiator Side Support RH
EC	140 (LHD)	Radiator Side Support LH
IG	142 (LHD)	Left Side of Instrument Panel
IH	142 (LHD)	Right Side of Shift Lever
IK	142 (LHD)	Cowl Side Panel RH

