

FRONT FOG LIGHT (RHD)

SERVICE HINTS

FRONT CONTROLLER

3-GROUND : Always approx. 12 volts

C14 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

8-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	130 (RHD)	F4	127 (RHD)	J15	A 131 (RHD)
C14	130 (RHD)	G1	131 (RHD)	J16	B 131 (RHD)
D2	A 131 (RHD)	J11	131 (RHD)	P7	132 (RHD)
D4	C 131 (RHD)	J13	131 (RHD)		
F3	127 (RHD)	J14	131 (RHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	152 (RHD)	Radiator Side Support RH
EC	152 (RHD)	Radiator Side Support LH
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever
IK	154 (RHD)	Right Side of Instrument Panel

