

**SERVICE HINTS****D4 (C) DRIVER SIDE J/B ECU**

(C) 5-GROUND : Always approx. 12 volts

6-GROUND : Always continuity

**LUGGAGE ROOM J/B ECU**

17-GROUND : Always approx. 12 volts

14-GROUND : Always continuity

 : **PARTS LOCATION**

Code		See Page	Code		See Page	Code		See Page
C14		116 (LHD)	F12		117 (LHD)	J24		121 (LHD)
D3	B	117 (LHD)	F18		120 (LHD)	L13	C	121 (LHD)
D4	C	117 (LHD)	J15	A	117 (LHD)	P7		118 (LHD)
D5	D	117 (LHD)	J16	B	117 (LHD)			

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DG		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LF		
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IG	142 (LHD)	Left Side of Instrument Panel
BM	146 (LHD)	Quarter Panel LH