

**SERVICE HINTS**

**D4 (C) DRIVER SIDE J/B ECU**

(C) 1-GROUND : Always approx. 12 volts  
 1-GROUND : Always continuity

**LUGGAGE ROOM J/B ECU**

17-GROUND : Always approx. 12 volts  
 14-GROUND : Always continuity

**○ : PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C14	130 (RHD)	F12	131 (RHD)	J24	135 (RHD)
D3	B 131 (RHD)	F18	134 (RHD)	L13	C 135 (RHD)
D4	C 131 (RHD)	J15	A 131 (RHD)	P7	132 (RHD)
D5	D 131 (RHD)	J16	B 131 (RHD)		

**○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DG		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LF		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)

**□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

**▽ : GROUND POINTS**

Code	See Page	Ground Points Location
IK	154 (RHD)	Right Side of Instrument Panel
BM	158 (RHD)	Quarter Panel LH