

SERVICE HINTS**H3 HEADLIGHT CLEANER CONTROL RELAY**

1-GROUND : Approx. 12 volts with ignition SW at ON or ST position
 5-GROUND : Always approx. 12 volts
 3-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C14		130 (RHD)	H3		127 (RHD)	J2	B	128 (RHD)
D4	C	131 (RHD)	H4		127 (RHD)	T7		133 (RHD)
D5	D	131 (RHD)	J1	A	128 (RHD)			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EC	152 (RHD)	Radiator Side Support LH
IK	154 (RHD)	Right Side of Instrument Panel