

# HEADLIGHT (RHD)

## SYSTEM OUTLINE

In the daytime running light system, when the system recognizes that the vehicle is ready to travel according to the signals from the alternator and brake SW etc., the headlight (High) comes on dimmed through the communication control among the gateway ECU, J/B ECU and front controller etc.

## SERVICE HINTS

### FRONT CONTROLLER

6-GROUND : Always approx. 12 volts

### C14 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

8-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page		
A13	126 (RHD)	E7	E	126 (RHD)	J16	B	131 (RHD)
A14	130 (RHD)	G1		131 (RHD)	L13		135 (RHD)
A27	130 (RHD)	H5		127 (RHD)	P2		132 (RHD)
B1	126 (RHD)	H6		127 (RHD)	P3	A	132 (RHD)
C6	130 (RHD)	H7		127 (RHD)	P7		132 (RHD)
C12	130 (RHD)	H8		127 (RHD)	S11	A	133 (RHD)
C14	130 (RHD)	J11		131 (RHD)	S12	B	133 (RHD)
D2	A	131 (RHD)	J13	131 (RHD)	S13	C	133 (RHD)
D4	C	131 (RHD)	J14	131 (RHD)			
E3	A	126 (RHD)	J15	A	131 (RHD)		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	81	Engine Room Main Wire and Engine Room No.1 J/B (Engine Compartment Left)
4A	85 (RHD)	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
4B		
DC	99 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
DH		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PH		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IC4		
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		



**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	152 (RHD)	Radiator Side Support RH
EC	152 (RHD)	Radiator Side Support LH
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever
IK	154 (RHD)	Right Side of Instrument Panel



**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	152 (RHD)	Engine Room Main Wire	E6	152 (RHD)	Engine Room Main Wire