

I GROUND POINT (LHD)

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page		
J3	A	114 (LHD)	J9	117 (LHD)	J27	121 (LHD)	
J4	B	114 (LHD)	J22	121 (LHD)	J28	A	121 (LHD)
J5	A	114 (LHD)	J24	121 (LHD)	J29	B	121 (LHD)
J6	B	114 (LHD)	J25	A	121 (LHD)	J30	121 (LHD)
J7		114 (LHD)	J26	B	121 (LHD)	J31	125 (LHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)
3	83 (LHD)	Engine Room No.3 R/B (Engine Compartment Left)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	88 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
DD		
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DG		
DH		
LA		
LB	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PF	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PG		
PH		
PJ	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IF1	144 (LHD)	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
II1	144 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
II2		
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	146 (LHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	146 (LHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BF1	148 (LHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BG2	148 (LHD)	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)
BH1	150 (LHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	150 (LHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	140 (LHD)	Radiator Side Support RH
EB	140 (LHD)	Under the Fusible Link Block
EC	140 (LHD)	Radiator Side Support LH
ED	140 (LHD)	Cowl Top Side LH
EE	140 (LHD)	RH Side of Cylinder Head
EF	140 (LHD)	LH Side of Cylinder Head
IG	142 (LHD)	Left Side of Instrument Panel
IH	142 (LHD)	Right Side of Shift Lever
II		
IJ	142 (LHD)	Instrument Panel Brace RH
IK	142 (LHD)	Cowl Side Panel RH
IR	142 (LHD)	Under the Front Passenger's Seat
BL	146 (LHD)	Rear Floor Partition Panel LH
BM	146 (LHD)	Quarter Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH
BO	146 (LHD)	Quarter Panel RH
BP	150 (LHD)	Rear Passenger LH Seat Back
BQ	150 (LHD)	Rear Passenger RH Seat Back

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	140 (LHD)	Engine Room Main Wire	B1	146 (LHD)	Roof Wire
E4			B3	146 (LHD)	Floor Wire
E5			B5 B6	148 (LHD)	Front Seat LH Wire
E6					
E12	140 (LHD)	Engine Wire	B7	148 (LHD)	Front Seat RH Wire
E13			B8	150 (LHD)	Rear Seat LH Wire
I3	144 (LHD)	Instrument Panel Wire	B10	150 (LHD)	Rear Seat RH Wire
I4			B11		
I6					