

# I GROUND POINT (RHD)

## ○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
J3	A	128 (RHD)	J9		131 (RHD)	J27		135 (RHD)
J4	B	128 (RHD)	J22		135 (RHD)	J30		135 (RHD)
J5	A	128 (RHD)	J24		135 (RHD)	J31		139 (RHD)
J6	B	128 (RHD)	J25	A	135 (RHD)			
J7		128 (RHD)	J26	B	135 (RHD)			

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)
3	83 (RHD)	Engine Room No.3 R/B (Engine Compartment Right)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	99 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
DD		
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
DH		
LA		
LB	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PC	106 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)
PF	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PG		
PH		
PJ	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	154 (RHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IB2		
IF2	156 (RHD)	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BF1	160 (RHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BG1	160 (RHD)	Floor Wire and Front Seat RH Wire (Under the Driver's Seat)
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	152 (RHD)	Radiator Side Support RH
EB	152 (RHD)	Cowl Top Side RH
EC	152 (RHD)	Radiator Side Support LH
ED	152 (RHD)	Under the Fusible Link Block
EE	152 (RHD)	RH Side of Cylinder Head
EF	152 (RHD)	LH Side of Cylinder Head
IG	154 (RHD)	Cowl Side Panel LH
IH	154 (RHD)	Left Side of Shift Lever
II		
IJ	154 (RHD)	Instrument Panel Brace LH
IK	154 (RHD)	Right Side of Instrument Panel
IR	154 (RHD)	Under the Driver's Seat
BL	158 (RHD)	Rear Floor Partition Panel LH
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BO	158 (RHD)	Quarter Panel RH
BP	162 (RHD)	Rear Passenger LH Seat Back
BQ	162 (RHD)	Rear Passenger RH Seat Back

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	152 (RHD)	Engine Room Main Wire	B2	158 (RHD)	Roof Wire
E4			B4	158 (RHD)	Floor Wire
E5			B5		
E6			B7	160 (RHD)	Front Seat LH Wire
E11	152 (RHD)	Engine Wire	B8	160 (RHD)	Front Seat RH Wire
E12			B9		
I2	156 (RHD)	Instrument Panel Wire	B10	162 (RHD)	Rear Seat LH Wire
I4			B12	162 (RHD)	Rear Seat RH Wire
I5			B13		