

INTERIOR LIGHT (LHD)

SERVICE HINTS

P4 (B) PASSENGER SIDE J/B ECU

5-GROUND : Always approx. 12 volts

7, (B) 11-GROUND : Always continuity

LUGGAGE ROOM J/B ECU

14-GROUND : Always continuity

D25 DRIVER DOOR ECU

6-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

F17 FRONT PASSENGER DOOR ECU

6-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

R15 REAR DOOR LH ECU

2-GROUND : Always approx. 12 volts

6-GROUND : Always continuity

R16 REAR DOOR RH ECU

2-GROUND : Always approx. 12 volts

6, 15-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	116 (LHD)	G1	117 (LHD)	L13 C	121 (LHD)
A27	116 (LHD)	I19	121 (LHD)	O6	122 (LHD)
C6	116 (LHD)	I24	121 (LHD)	P3 A	118 (LHD)
C12	116 (LHD)	I25	121 (LHD)	P4 B	118 (LHD)
D8	120 (LHD)	J11 A	117 (LHD)	R15	122 (LHD)
D9	120 (LHD)	J12 B	117 (LHD)	R16	122 (LHD)
D10	120 (LHD)	J13	117 (LHD)	S13	119 (LHD)
D11	120 (LHD)	J17 A	117 (LHD)	S17	119 (LHD)
D12	120 (LHD)	J18 B	117 (LHD)	S19	119 (LHD)
D13	120 (LHD)	J22	121 (LHD)	S20	119 (LHD)
D14	120 (LHD)	J24	121 (LHD)	T5	119 (LHD)
D15	120 (LHD)	J27	121 (LHD)	T8	119 (LHD)
D19	120 (LHD)	J30	121 (LHD)	T9	119 (LHD)
D25	120 (LHD)	L7	121 (LHD)	V8	123 (LHD)
E3	112 (LHD)	L8	121 (LHD)	V9	123 (LHD)
F17	120 (LHD)	L11 A	121 (LHD)		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DH		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LC		
LE		
LJ	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PG		
PH		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)
PJ		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC3		
IH2	144 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	144 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
II2		
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	146 (LHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	146 (LHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	146 (LHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)

 : GROUND POINTS

Code	See Page	Ground Points Location
IH	142 (LHD)	Right Side of Shift Lever
II		
IK	142 (LHD)	Cowl Side Panel RH
BL	146 (LHD)	Rear Floor Partition Panel LH
BM	146 (LHD)	Quarter Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH
BO	146 (LHD)	Quarter Panel RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	146 (LHD)	Roof Wire	B2	146 (LHD)	Roof Wire