

# INTERIOR LIGHT (RHD)

## SERVICE HINTS

### P4 (B) PASSENGER SIDE J/B ECU

10-GROUND : Always approx. 12 volts  
2, (B) 1-GROUND : Always continuity

### LUGGAGE ROOM J/B ECU

14-GROUND : Always continuity

### D25 DRIVER DOOR ECU

6-GROUND : Always approx. 12 volts  
1-GROUND : Always continuity

### F17 FRONT PASSENGER DOOR ECU

6-GROUND : Always approx. 12 volts  
1-GROUND : Always continuity

### R15 REAR DOOR LH ECU

2-GROUND : Always approx. 12 volts  
6-GROUND : Always continuity

### R16 REAR DOOR RH ECU

2-GROUND : Always approx. 12 volts  
6, 15-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	130 (RHD)	F17	134 (RHD)	L13   C	135 (RHD)
A27	130 (RHD)	G1	131 (RHD)	O6	136 (RHD)
C6	130 (RHD)	I19	135 (RHD)	P3   A	132 (RHD)
C12	130 (RHD)	I24	135 (RHD)	P4   B	132 (RHD)
D8	134 (RHD)	I25	135 (RHD)	R15	136 (RHD)
D9	134 (RHD)	J11   A	131 (RHD)	R16	136 (RHD)
D10	134 (RHD)	J12   B	131 (RHD)	S13	133 (RHD)
D11	134 (RHD)	J13	131 (RHD)	S17	133 (RHD)
D12	134 (RHD)	J22	135 (RHD)	S19	133 (RHD)
D13	134 (RHD)	J24	135 (RHD)	S20	133 (RHD)
D14	134 (RHD)	J27	135 (RHD)	T5	133 (RHD)
D15	134 (RHD)	J30	135 (RHD)	T8	133 (RHD)
D19	134 (RHD)	L7	135 (RHD)	T9	133 (RHD)
D25	134 (RHD)	L8	135 (RHD)	V8	137 (RHD)
E3	126 (RHD)	L11   A	135 (RHD)	V9	137 (RHD)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DH		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LC		
LE		
LJ	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PG		
PH		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)
PJ		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	154 (RHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IB2		
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IH	154 (RHD)	Left Side of Shift Lever
II		
BL	158 (RHD)	Rear Floor Partition Panel LH
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BO	158 (RHD)	Quarter Panel RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	158 (RHD)	Roof Wire	B2	158 (RHD)	Roof Wire