

ILLUMINATION (LHD)

SERVICE HINTS

C14 COMBINATION SW

- 1-GROUND : Always approx. 12 volts
- 2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 8-GROUND : Always continuity

DRIVER SIDE J/B ECU

- 9-GROUND : Always approx. 12 volts
- 6-GROUND : Always continuity

D25 (B) DRIVER DOOR ECU

- (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

F17 (B) FRONT PASSENGER DOOR ECU

- (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

R15 (B) REAR DOOR LH ECU

- (B) 2-GROUND : Always approx. 12 volts
- (B) 6-GROUND : Always continuity

R16 (A) REAR DOOR RH ECU

- (A) 2-GROUND : Always approx. 12 volts
- (A) 6-GROUND : Always continuity
- (A) 15-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A18	116 (LHD)	F13	117 (LHD)	J27	121 (LHD)
A19	116 (LHD)	F16	A 120 (LHD)	J28	A 121 (LHD)
A20	116 (LHD)	F17	B 120 (LHD)	J29	B 121 (LHD)
A21	116 (LHD)	G1	117 (LHD)	J30	121 (LHD)
A36	120 (LHD)	G2	117 (LHD)	L13	121 (LHD)
A37	120 (LHD)	G3	117 (LHD)	M1	118 (LHD)
A38	125 (LHD)	H17	A 117 (LHD)	O3	118 (LHD)
C6	116 (LHD)		B 117 (LHD)	O4	118 (LHD)
C7	116 (LHD)	H21	117 (LHD)	O5	118 (LHD)
C8	116 (LHD)	I20	121 (LHD)	P7	118 (LHD)
C10	116 (LHD)	I21	121 (LHD)	R4	119 (LHD)
C11	116 (LHD)	I22	121 (LHD)	R6	119 (LHD)
C12	116 (LHD)	I23	121 (LHD)	R14	A 122 (LHD)
C14	116 (LHD)	J11	117 (LHD)	R15	B 122 (LHD)
C15	116 (LHD)	J13	A 117 (LHD)	R16	A 122 (LHD)
D2	A 117 (LHD)	J14	B 117 (LHD)	R17	B 122 (LHD)
D3	B 117 (LHD)	J15	A 117 (LHD)	R21	122 (LHD)
D4	C 117 (LHD)	J16	B 117 (LHD)	R22	122 (LHD)
D5	D 117 (LHD)	J17	A 117 (LHD)	R29	125 (LHD)
D24	A 120 (LHD)	J18	B 117 (LHD)	S17	119 (LHD)
D25	B 120 (LHD)	J22	121 (LHD)	T5	119 (LHD)
D26	120 (LHD)	J23	121 (LHD)	T7	119 (LHD)
E11	117 (LHD)	J24	121 (LHD)	T9	119 (LHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DG		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
LC	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PG		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)
PJ		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC3		
IG2	144 (LHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	146 (LHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	146 (LHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	146 (LHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BH1	150 (LHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	150 (LHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	142 (LHD)	Left Side of Instrument Panel
II	142 (LHD)	Right Side of Shift Lever
IK	142 (LHD)	Cowl Side Panel RH
BL	146 (LHD)	Rear Floor Partition Panel LH
BM	146 (LHD)	Quarter Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH
BO	146 (LHD)	Quarter Panel RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	144 (LHD)	Instrument Panel Wire	I6	144 (LHD)	Instrument Panel Wire