

ILLUMINATION (RHD)

SERVICE HINTS

C14 COMBINATION SW

- 1-GROUND : Always approx. 12 volts
- 2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 8-GROUND : Always continuity

DRIVER SIDE J/B ECU

- 4-GROUND : Always approx. 12 volts
- 1-GROUND : Always continuity

D25 (B) DRIVER DOOR ECU

- (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

F17 (B) FRONT PASSENGER DOOR ECU

- (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

R15 (B) REAR DOOR LH ECU

- (B) 2-GROUND : Always approx. 12 volts
- (B) 6-GROUND : Always continuity

R16 (A) REAR DOOR RH ECU

- (A) 2-GROUND : Always approx. 12 volts
- (A) 6-GROUND : Always continuity
- (A) 15-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A18	130 (RHD)	F13	131 (RHD)	J27	135 (RHD)
A19	130 (RHD)	F16	A 134 (RHD)	J28	A 135 (RHD)
A20	130 (RHD)	F17	B 134 (RHD)	J29	B 135 (RHD)
A21	130 (RHD)	G1	131 (RHD)	J30	135 (RHD)
A36	134 (RHD)	G2	131 (RHD)	L13	135 (RHD)
A37	134 (RHD)	G3	131 (RHD)	M1	132 (RHD)
A38	139 (RHD)	H17	A 131 (RHD)	O3	132 (RHD)
C6	130 (RHD)		B 131 (RHD)	O4	132 (RHD)
C7	130 (RHD)	H21	131 (RHD)	O5	132 (RHD)
C8	130 (RHD)	I20	135 (RHD)	P7	132 (RHD)
C10	130 (RHD)	I21	135 (RHD)	R4	133 (RHD)
C11	130 (RHD)	I22	135 (RHD)	R6	133 (RHD)
C12	130 (RHD)	I23	135 (RHD)	R14	A 136 (RHD)
C14	130 (RHD)	J11	131 (RHD)	R15	B 136 (RHD)
C15	130 (RHD)	J13	A 131 (RHD)	R16	A 136 (RHD)
D2	A 131 (RHD)	J14	B 131 (RHD)	R17	B 136 (RHD)
D3	B 131 (RHD)	J15	A 131 (RHD)	R21	136 (RHD)
D4	C 131 (RHD)	J16	B 131 (RHD)	R22	136 (RHD)
D5	D 131 (RHD)	J17	A 131 (RHD)	R29	139 (RHD)
D24	A 134 (RHD)	J18	B 131 (RHD)	S17	133 (RHD)
D25	B 134 (RHD)	J22	135 (RHD)	T5	133 (RHD)
D26	134 (RHD)	J23	135 (RHD)	T7	133 (RHD)
E11	131 (RHD)	J24	135 (RHD)	T9	133 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
LC	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PG		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)
PJ		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC4	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IH	154 (RHD)	Left Side of Shift Lever
IK	154 (RHD)	Right Side of Instrument Panel
BL	158 (RHD)	Rear Floor Partition Panel LH
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BO	158 (RHD)	Quarter Panel RH
BP	162 (RHD)	Rear Passenger LH Seat Back

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	156 (RHD)	Instrument Panel Wire	B10	162 (RHD)	Rear Seat LH Wire
I3					