

# KEY REMINDER AND SEAT BELT WARNING (LHD)

## SYSTEM OUTLINE

### 1. SEAT BELT WARNING SYSTEM

When the ignition SW is ON and the driver's seat belt is not used, the warning light on the combination meter blinks and the buzzer sounds at the same time to warn the driver. As for the front passenger's seat, only when the built-in occupant detection sensor in the buckle SW RH detects that the front passenger is seated, the system warns the passenger by the warning light (w/o LEXUS navigation system) or the multi-display (w/ LEXUS navigation system).

### 2. KEY REMINDER SYSTEM

If the front door on the driver's side is opened with the ignition key inserted in the cylinder and the ignition SW is OFF or ACC, the buzzer sounds to prevent the driver from forgetting to pull out the ignition key.

## SERVICE HINTS

### C12 COMBINATION METER

- 1-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 12, 13-GROUND : Always approx. 12 volts
- 11, 22-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A27	B 116 (LHD)	D25	120 (LHD)	M1	A 118 (LHD)
A28	C 116 (LHD)	G1	117 (LHD)	M2	B 118 (LHD)
B4	124 (LHD)	J11	117 (LHD)	S13	119 (LHD)
B5	124 (LHD)	J13	117 (LHD)	S17	119 (LHD)
C10	116 (LHD)	J15	A 117 (LHD)	T5	119 (LHD)
C12	116 (LHD)	J16	B 117 (LHD)	T9	119 (LHD)
D2	A 117 (LHD)	J17	A 117 (LHD)	U7	A 119 (LHD)
D3	B 117 (LHD)	J18	B 117 (LHD)		B 119 (LHD)
D12	120 (LHD)	J24	121 (LHD)		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DH		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PG		
PJ	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
BF1	148 (LHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)



**: GROUND POINTS**

Code	See Page	Ground Points Location
IH	142 (LHD)	Right Side of Shift Lever
II		
IJ	142 (LHD)	Instrument Panel Brace RH
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH



**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	144 (LHD)	Instrument Panel Wire			