

LUGGAGE COMPARTMENT DOOR OPENER AND CLOSER (LHD)

SYSTEM OUTLINE

The luggage compartment door can be opened from inside the vehicle compartment by operating the luggage compartment door opener SW. In case the luggage compartment door is not closed fully, the actuator will operate and the luggage door will be pulled down and locked automatically.

SERVICE HINTS

D4 (C) DRIVER SIDE J/B ECU

(C) 5-GROUND : Always approx. 12 volts
6-GROUND : Always continuity

LUGGAGE ROOM J/B ECU

16-GROUND : Always approx. 12 volts
14-GROUND : Always continuity

L4 LUGGAGE COMPARTMENT DOOR CLOSER MOTOR

3-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
C12	116 (LHD)	J11	117 (LHD)	J25	121 (LHD)	
C14	116 (LHD)	J13	117 (LHD)	L1	118 (LHD)	
D3	B	J15	A	L4	121 (LHD)	
D4	C	J16	B	L11	A	121 (LHD)
D5	D	J17	A	L13	C	121 (LHD)
D19	120 (LHD)	J18	B	P7	118 (LHD)	
G1	117 (LHD)	J24	121 (LHD)			

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DG		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	142 (LHD)	Left Side of Instrument Panel
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH

