

# LUGGAGE COMPARTMENT DOOR OPENER AND CLOSER (RHD)

## SYSTEM OUTLINE

The luggage compartment door can be opened from inside the vehicle compartment by operating the luggage compartment door opener SW. In case the luggage compartment door is not closed fully, the actuator will operate and the luggage door will be pulled down and locked automatically.

## SERVICE HINTS

### D4 (C) DRIVER SIDE J/B ECU

(C) 1-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

### LUGGAGE ROOM J/B ECU

16-GROUND : Always approx. 12 volts

14-GROUND : Always continuity

### L4 LUGGAGE COMPARTMENT DOOR CLOSER MOTOR

3-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page			
C12	130 (RHD)	G1	131 (RHD)	J25	135 (RHD)			
C14	130 (RHD)	J11	131 (RHD)	L1	132 (RHD)			
D3	B	131 (RHD)	J13	131 (RHD)	L4	135 (RHD)		
D4	C	131 (RHD)	J15	A	131 (RHD)	L11	A	135 (RHD)
D5	D	131 (RHD)	J16	B	131 (RHD)	L13	C	135 (RHD)
D19	134 (RHD)	J24	135 (RHD)	P7	132 (RHD)			

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DG		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IK	154 (RHD)	Right Side of Instrument Panel
BM	158 (RHD)	Quarter Panel LH

