

## SERVICE HINTS

### D25 (B) DRIVER DOOR ECU

- (B) 5-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. **12** volts
- (B) 1-GROUND : Always continuity

### F17 (B) FRONT PASSENGER DOOR ECU

- (B) 5-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. **12** volts
- (B) 1-GROUND : Always continuity

### R15 (B) REAR DOOR LH ECU

- (B) 26-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (B) 1, (B) 2-GROUND : Always approx. **12** volts
- (B) 6-GROUND : Always continuity

### R16 (A) REAR DOOR RH ECU

- (A) 26-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (A) 1, (A) 2-GROUND : Always approx. **12** volts
- (A) 6, (A) 15-GROUND : Always continuity

### T5 THEFT DETERRENT ECU

- 24-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 31-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
- 1, 21-GROUND : Always approx. **12** volts
- 20-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A36	120 (LHD)	I22	121 (LHD)	P15	122 (LHD)
A37	120 (LHD)	I23	121 (LHD)	P16	122 (LHD)
D8	120 (LHD)	J11	A 117 (LHD)	P17	122 (LHD)
D9	120 (LHD)	J12	B 117 (LHD)	R6	119 (LHD)
D10	120 (LHD)	J13	A 117 (LHD)	R7	119 (LHD)
D11	120 (LHD)	J14	B 117 (LHD)	R8	122 (LHD)
D12	120 (LHD)	J15	A 117 (LHD)	R14	A 122 (LHD)
D13	120 (LHD)	J16	B 117 (LHD)	R15	B 122 (LHD)
D14	120 (LHD)	J22	121 (LHD)	R16	A 122 (LHD)
D15	120 (LHD)	J24	121 (LHD)	R17	B 122 (LHD)
D16	120 (LHD)	J27	121 (LHD)	R21	122 (LHD)
D18	120 (LHD)	J28	A 121 (LHD)	R22	122 (LHD)
D20	120 (LHD)	J29	B 121 (LHD)	R26	122 (LHD)
D21	120 (LHD)	J30	121 (LHD)	R27	125 (LHD)
D22	120 (LHD)	J31	125 (LHD)	R28	125 (LHD)
D23	120 (LHD)	K1	114 (LHD)	R29	125 (LHD)
D24	A 120 (LHD)	K4	118 (LHD)	S15	119 (LHD)
D25	B 120 (LHD)	L9	121 (LHD)	S17	119 (LHD)
D26	120 (LHD)	L10	121 (LHD)	S22	123 (LHD)
D28	124 (LHD)	M4	122 (LHD)	S23	123 (LHD)
F16	A 120 (LHD)	O6	122 (LHD)	T1	115 (LHD)
F17	B 120 (LHD)	P10	122 (LHD)	T5	119 (LHD)
G1	117 (LHD)	P11	122 (LHD)	T9	119 (LHD)
I19	121 (LHD)	P12	122 (LHD)	T16	123 (LHD)
I20	121 (LHD)	P13	122 (LHD)	U7	119 (LHD)
I21	121 (LHD)	P14	122 (LHD)		

# MULTIPLEX COMMUNICATION SYSTEM (DOOR ECU) [LHD]

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DG		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LC		
LE		
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PG		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)
PJ		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC3		
IG2	144 (LHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IH2	144 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	144 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
II2		
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	146 (LHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	146 (LHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	146 (LHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BE1	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BF1	148 (LHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BH1	150 (LHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	150 (LHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

## : GROUND POINTS

Code	See Page	Ground Points Location
IG	142 (LHD)	Left Side of Instrument Panel
IH	142 (LHD)	Right Side of Shift Lever
II		
IK	142 (LHD)	Cowl Side Panel RH
BL	146 (LHD)	Rear Floor Partition Panel LH
BM	146 (LHD)	Quarter Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH
BO	146 (LHD)	Quarter Panel RH

## : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	144 (LHD)	Instrument Panel Wire	B3	146 (LHD)	Floor Wire
B1	146 (LHD)	Roof Wire			

