

# MULTIPLEX COMMUNICATION SYSTEM (DOOR ECU) [RHD]

## SERVICE HINTS

### D25 (B) DRIVER DOOR ECU

- (B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

### F17 (B) FRONT PASSENGER DOOR ECU

- (B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

### R15 (B) REAR DOOR LH ECU

- (B) 26-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (B) 1, (B) 2-GROUND : Always approx. 12 volts
- (B) 6-GROUND : Always continuity

### R16 (A) REAR DOOR RH ECU

- (A) 26-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (A) 1, (A) 2-GROUND : Always approx. 12 volts
- (A) 6, (A) 15-GROUND : Always continuity

### T5 THEFT DETERRENT ECU

- 24-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 31-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
- 1, 21-GROUND : Always approx. 12 volts
- 20-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A36	134 (RHD)	I22	135 (RHD)	P15	136 (RHD)
A37	134 (RHD)	I23	135 (RHD)	P16	136 (RHD)
D8	134 (RHD)	J11	A 131 (RHD)	P17	136 (RHD)
D9	134 (RHD)	J12	B 131 (RHD)	R6	133 (RHD)
D10	134 (RHD)	J13	A 131 (RHD)	R7	133 (RHD)
D11	134 (RHD)	J14	B 131 (RHD)	R8	136 (RHD)
D12	134 (RHD)	J15	A 131 (RHD)	R14	A 136 (RHD)
D13	134 (RHD)	J16	B 131 (RHD)	R15	B 136 (RHD)
D14	134 (RHD)	J22	135 (RHD)	R16	A 136 (RHD)
D15	134 (RHD)	J24	135 (RHD)	R17	B 136 (RHD)
D16	134 (RHD)	J27	135 (RHD)	R21	136 (RHD)
D17	134 (RHD)	J28	A 135 (RHD)	R22	136 (RHD)
D20	134 (RHD)	J29	B 135 (RHD)	R26	136 (RHD)
D21	134 (RHD)	J30	135 (RHD)	R27	139 (RHD)
D22	134 (RHD)	J31	139 (RHD)	R28	139 (RHD)
D23	134 (RHD)	K1	128 (RHD)	R29	139 (RHD)
D24	A 134 (RHD)	K4	132 (RHD)	S15	133 (RHD)
D25	B 134 (RHD)	L9	135 (RHD)	S17	133 (RHD)
D26	134 (RHD)	L10	135 (RHD)	S22	137 (RHD)
D28	138 (RHD)	M4	136 (RHD)	S23	137 (RHD)
F16	A 134 (RHD)	O6	136 (RHD)	T1	129 (RHD)
F17	B 134 (RHD)	P9	136 (RHD)	T5	133 (RHD)
G1	131 (RHD)	P11	136 (RHD)	T9	133 (RHD)
I19	135 (RHD)	P12	136 (RHD)	T16	137 (RHD)
I20	135 (RHD)	P13	136 (RHD)	U7	133 (RHD)
I21	135 (RHD)	P14	136 (RHD)		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LC		
LE		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PG		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)
PJ		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	154 (RHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IB2		
ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IG1	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IG2		
IH3	156 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BG1	160 (RHD)	Floor Wire and Front Seat RH Wire (Under the Driver's Seat)
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IH	154 (RHD)	Left Side of Shift Lever
II		
IK	154 (RHD)	Right Side of Instrument Panel
BL	158 (RHD)	Rear Floor Partition Panel LH
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BO	158 (RHD)	Quarter Panel RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	156 (RHD)	Instrument Panel Wire	B5	158 (RHD)	Floor Wire
B2	158 (RHD)	Roof Wire			