

MIRROR HEATER (LHD)

SYSTEM OUTLINE

As the mirror heater works together with the wiper it is automatically turned ON. The mirror heater is always ON when the wiper is operated. According to the timer the mirror heater will be OFF after about 15 minutes from the wiper stopped. The mirror heater also operates when the rear window defogger SW (A/C control assembly) is turned ON.

SERVICE HINTS

D25 DRIVER DOOR ECU

- 5-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 4, 6-GROUND : Always approx. 12 volts
- 1-GROUND : Always continuity

F17 FRONT PASSENGER DOOR ECU

- 5-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 4, 6-GROUND : Always approx. 12 volts
- 1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	116 (LHD)	G1	117 (LHD)	P3	A
C6	116 (LHD)	J11	A	P4	B
C14	116 (LHD)	J12	B	P7	118 (LHD)
D2	A	J13	A	S17	119 (LHD)
D4	C	J14	B	T5	119 (LHD)
D25	120 (LHD)	J22	121 (LHD)	T9	119 (LHD)
E3	112 (LHD)	J27	121 (LHD)		
F17	120 (LHD)	L13	121 (LHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PG		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)
PJ		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC3		
IH2	144 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BL	146 (LHD)	Rear Floor Partition Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH

