

MIRROR HEATER (RHD)

SYSTEM OUTLINE

As the mirror heater works together with the wiper it is automatically turned ON. The mirror heater is always ON when the wiper is operated. According to the timer the mirror heater will be OFF after about 15 minutes from the wiper stopped. The mirror heater also operates when the rear window defogger SW (A/C control assembly) is turned ON.

SERVICE HINTS

D25 DRIVER DOOR ECU

- 5-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 4, 6-GROUND : Always approx. 12 volts
- 1-GROUND : Always continuity

F17 FRONT PASSENGER DOOR ECU

- 5-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 4, 6-GROUND : Always approx. 12 volts
- 1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	130 (RHD)	G1	131 (RHD)	P3	A
C6	130 (RHD)	J11	A	P4	B
C14	130 (RHD)	J12	B	P7	132 (RHD)
D2	A	J13	A	S17	133 (RHD)
D4	C	J14	B	T5	133 (RHD)
D25	134 (RHD)	J22	135 (RHD)	T9	133 (RHD)
E3	126 (RHD)	J27	135 (RHD)		
F17	134 (RHD)	L13	135 (RHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PG		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)
PJ		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IC4		
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BL	158 (RHD)	Rear Floor Partition Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH

