

## SYSTEM OUTLINE

The moon roof can be tilt up/down, slid open/close by operating the control SW built in the overhead J/B.  
The moon roof will open also by pushing the UNLOCK SW of the ignition key transmitter for more than 2.5 seconds.

## SERVICE HINTS

### M4 MOON ROOF CONTROL ECU

- 5-GROUND : Always approx. 12 volts
- 7-GROUND : Always continuity
- 8-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

### O6 OVERHEAD J/B

- 26-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 1-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	130 (RHD)	G1	131 (RHD)	R15	136 (RHD)
D12	134 (RHD)	I19	135 (RHD)	R16	136 (RHD)
D13	134 (RHD)	J11	131 (RHD)	S17	133 (RHD)
D14	134 (RHD)	J13	131 (RHD)	T5	133 (RHD)
D15	134 (RHD)	J15	131 (RHD)	T9	133 (RHD)
D25	134 (RHD)	M4	136 (RHD)		
F17	134 (RHD)	O6	136 (RHD)		

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PG		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	154 (RHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IB2		
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA2	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB2	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IH	154 (RHD)	Left Side of Shift Lever

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	158 (RHD)	Roof Wire			