

SYSTEM OUTLINE

POSITION MEMORY FUNCTION

The shoulder belt anchorage position can be memorized and resumed by the operation of the driving position memory SW.

SERVICE HINTS

D25 (B) DRIVER DOOR ECU

- (B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

F17 (B) FRONT PASSENGER DOOR ECU

- (B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

DRIVER SIDE J/B ECU

- 7-GROUND : Always approx. 12 volts
- 6-GROUND : Always continuity

P4 (B) PASSENGER SIDE J/B ECU

- 6-GROUND : Always approx. 12 volts
- (B) 11, 7-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A14		116 (LHD)	F17	B	120 (LHD)	P4	B	118 (LHD)
C6		116 (LHD)	G1		117 (LHD)	P5	C	118 (LHD)
D2	A	117 (LHD)	J11	A	117 (LHD)	S17		119 (LHD)
D3	B	117 (LHD)	J12	B	117 (LHD)	S22		123 (LHD)
D24	A	120 (LHD)	J13	A	117 (LHD)	S23		123 (LHD)
D25	B	120 (LHD)	J14	B	117 (LHD)	S24		123 (LHD)
D26		120 (LHD)	J22		121 (LHD)	S27		123 (LHD)
E3		112 (LHD)	J27		121 (LHD)	T5		119 (LHD)
F16	A	120 (LHD)	P3	A	118 (LHD)	T9		119 (LHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DG		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PG		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)
PJ		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IH2	144 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)

POWER SHOULDER BELT ANCHORAGE (LHD)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	142 (LHD)	Left Side of Instrument Panel
II	142 (LHD)	Right Side of Shift Lever
BL	146 (LHD)	Rear Floor Partition Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH

