

SYSTEM OUTLINE

POSITION MEMORY FUNCTION

The shoulder belt anchorage position can be memorized and resumed by the operation of the driving position memory SW.

SERVICE HINTS

D25 (B) DRIVER DOOR ECU

(B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

(B) 4, (B) 6-GROUND : Always approx. 12 volts

(B) 1-GROUND : Always continuity

F17 (B) FRONT PASSENGER DOOR ECU

(B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

(B) 4, (B) 6-GROUND : Always approx. 12 volts

(B) 1-GROUND : Always continuity

DRIVER SIDE J/B ECU

2-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

P4 (B) PASSENGER SIDE J/B ECU

1-GROUND : Always approx. 12 volts

(B)1, 2-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page		
A14	130 (RHD)	F17	B	134 (RHD)	P4	B	132 (RHD)
C6	130 (RHD)	G1		131 (RHD)	P5	C	132 (RHD)
D2	A	J11	A	131 (RHD)	S17		133 (RHD)
D3	B	J12	B	131 (RHD)	S22		137 (RHD)
D24	A	J13	A	131 (RHD)	S23		137 (RHD)
D25	B	J14	B	131 (RHD)	S25		137 (RHD)
D26	134 (RHD)	J22		135 (RHD)	S26		137 (RHD)
E3	126 (RHD)	J27		135 (RHD)	T5		133 (RHD)
F16	A	P3	A	132 (RHD)	T9		133 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PG		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)
PJ		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IC4		
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)

POWER SHOULDER BELT ANCHORAGE (RHD)

 : GROUND POINTS

Code	See Page	Ground Points Location
IH	154 (RHD)	Left Side of Shift Lever
IK	154 (RHD)	Right Side of Instrument Panel
BL	158 (RHD)	Rear Floor Partition Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH

