

POWER SEAT (FRONT PASSENGER'S SEAT) [LHD]

SERVICE HINTS

P25 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT)

1-GROUND : Always approx. 12 volts

6-GROUND : Always continuity

P24 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT LUMBAR SUPPORT)

1-GROUND : Always approx. 12 volts

2-GROUND : Always continuity

P26 POWER SEAT CONTROL SW SUB (FRONT PASSENGER'S SEAT)

10-GROUND : Always approx. 12 volts

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
P24	124 (LHD)	P34	124 (LHD)	P37	124 (LHD)
P25	124 (LHD)	P35	124 (LHD)	P38	124 (LHD)
P26	124 (LHD)	P36	124 (LHD)	P39	124 (LHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
LC	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BE1	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BG2	148 (LHD)	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IR	142 (LHD)	Under the Front Passenger's Seat

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	148 (LHD)	Front Seat RH Wire			

