

POWER SEAT (FRONT PASSENGER'S SEAT) [RHD]

SERVICE HINTS

P25 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT)

6-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

P24 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT LUMBAR SUPPORT)

4-GROUND : Always approx. 12 volts

3-GROUND : Always continuity

P26 POWER SEAT CONTROL SW SUB (FRONT PASSENGER'S SEAT)

10-GROUND : Always approx. 12 volts

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J22	135 (RHD)	P34	138 (RHD)	P38	138 (RHD)
P24	138 (RHD)	P35	138 (RHD)	P39	138 (RHD)
P25	138 (RHD)	P36	138 (RHD)		
P26	138 (RHD)	P37	138 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
PJ	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BF1	160 (RHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BL	158 (RHD)	Rear Floor Partition Panel LH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	160 (RHD)	Front Seat LH Wire			

