

# REAR AIR CONDITIONER (LHD)

## SYSTEM OUTLINE

The rear A/C OFF/AUTO/MANUAL (Mode), temperature can be selected at the A/C control panel (A/C control assembly) installed in the center cluster integration panel or the audio and rear A/C control SW in the rear center arm rest, which allows independent temperature control.  
Also the air purifier function and exhaust damper system offers superb comfort.

## SERVICE HINTS

### A14 (A) A/C CONTROL ASSEMBLY

- (A) 3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
- (A) 9-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (A)21-GROUND : Always approx. **12** volts
- (A) 1-GROUND : Always continuity

### L13 (C) LUGGAGE ROOM J/B ECU

- 4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 5, 6-GROUND : Always approx. **12** volts
- 14, (C) 5-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	A	116 (LHD)	J13	A	117 (LHD)
A15	B	116 (LHD)	J14	B	117 (LHD)
A32		120 (LHD)	J15	A	117 (LHD)
A38		125 (LHD)	J16	B	117 (LHD)
C6		116 (LHD)	J17	A	117 (LHD)
C12		116 (LHD)	J18	B	117 (LHD)
G1		117 (LHD)	J24		121 (LHD)
J11		117 (LHD)	L13	C	121 (LHD)
				M2	118 (LHD)
				R4	A
				R5	B
				R9	
				S32	A
				S33	B
				S35	

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LC		
LE		
LF		
LL		
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PJ	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC3		
IE1	142 (LHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
IF1	144 (LHD)	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
BC1	146 (LHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BE2	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BH1	150 (LHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	150 (LHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

 : GROUND POINTS

Code	See Page	Ground Points Location
II	142 (LHD)	Right Side of Shift Lever
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	144 (LHD)	Instrument Panel Wire			